
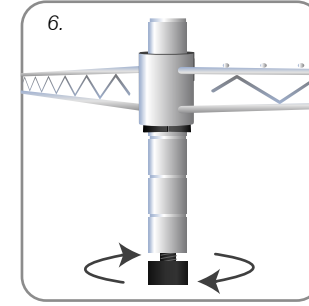
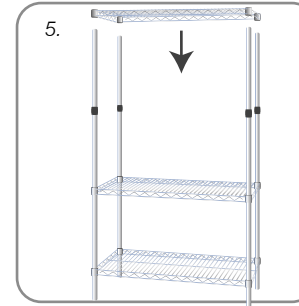
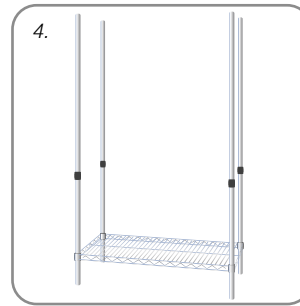
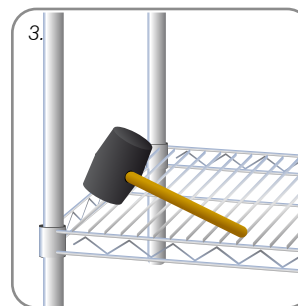
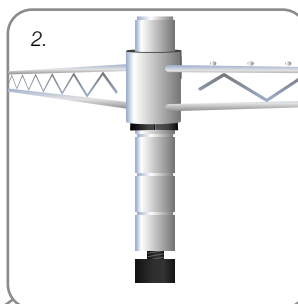
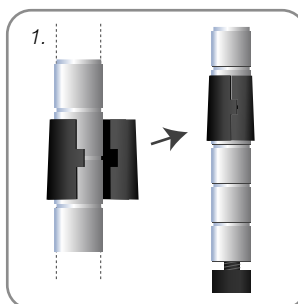


You will need !

A large rubber mallet

Protective gloves



1. Locate shelf collars onto the upright for the bottom shelf only. Ensure collars are seated into matching grooves and the thick tapered ends are at the bottom.

2. Feed the first shelf over the uprights locating the collars.

3. Tap down each corner thus clamping the shelf to the collar.

4. Locate collars for the next shelf repeating the previous steps.

5. Repeat 4

6. Adjust feet if necessary if floor uneven.